

JFX200-1213 EX



Just In Size



Single unit, various applications.



Pictograms



Braille signs



Displays



Information boards



Commercial signage



Packages







01 / Middle-size flatbed (up to 1270 mm imes 1300 mm)

Single unit - sign graphics & paper package print capability

30% less than JFX200-2513EX body size.

Even table size supports all the international A size.

• Sign graphics use supports A0 size sign panel

• Paper and package supports standard coated cardboard size.


1,270mm Α1





Suitable as an upgrade from a desktop UV printer

• Print speed comparison between the JFX200-1213EX and the UJF-6042MkIlle

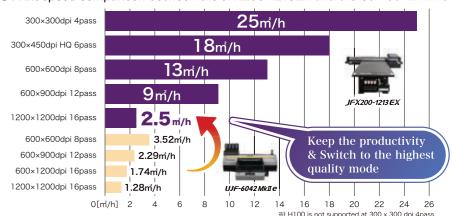

$\left.03 ight/$ Even faster texture printing

Fast, attractive and easy, added value texture printing

Increased braille printing spee. 2 types expression capability for application

All of these can be done just with standard design software and RasterLink7. Bring texture design into shape instantly.

High-speed Braille printing that is only possible with Mimaki's flatbed technology

Standard mode Braille part is constructed by clear ink emboss printing. Transparent

braille dots don't interrupt

High-speed mode

printing, utilised for braille

High-speed texture printing by bi-directional

and pictograms.

the based graphic design



2.5D print that combines texture print and smoother bumps and dips

Vacuum valve

Ink tanks

(pull-out unit)





Automatically generates texture layering data based on graphic data in RasterLink7.

Layers UV ink to make bumpy expressions, the thicker tha layers are, highlights bumpes and dips.

High image quality printing

Mimaki's advanced imaging technology realizes smooth gradation and high density print.

Fast and high quality production for custom goods, and signage.

Waveform control

By discharging spherical ink droplets directly, depositing of droplets is facilitated and overlapping between dots is reduced, achieving a sharp print quality with low grain.

JFX200-1213 EX

(Non-spherical discharge)



(Discharged in a nearly true spherical state)



transferred files (=iobs)



Control panel

Carriage

High precision landing is possible. Sharp finish with little grain.

Variable dots

Three different ink dot sizes are used in printing to enable high-quality prints with reduced graininess

(Fixed Dot Image)



(Variable Dot Image)




Dots are combined including the minimum size of 5 pl to enable grainless, smooth color printing.

Continue printing


MAPS (Mimaki Advanced Pass System)

Banding (horizontal stripes), uneven color, or glossy streak can be reduced to produce smooth prints by printing pass boundaries fading in gradation

(Without MAPS (Image))



(With MAPS (Image))



Based on printing conditions such as media/ink type and resolution, the most suitable gradation pattern is automatically selected and printed.

Operator-friendly user interfaces easily accessible from the front

V2 525_{mm} 775_{mm} V1

Valve and foot switch for vacuum control

The vacuum area is divided into a front section and a rear section. The valve can be used to switch between them easily depending on the media size. The foot switch allows you to turn vacuum on/off while checking the media location



Foot switch

Olnk tank unit

The ink bottles can be accessed from the front side of the printer for replacement and maintenance. This minimizes the pathway to be followed by operators

increasing work efficiency




Mimaki's technology for realizing stable operation

Continue printing

NCU (Nozzle Check Unit NRS (Nozzle Recovery System) The status of nozzles is If there is a problem left unsolved by the cleaning it automatically replaces the defective nozzles with other nozzles, which enables users to continue their automatically detected by the sensor. When the NCU detects a operation without waiting for service representative performs cleaning to solve the Nozzles that emit no ink are substituted by alternate nozzles. The system is automatically set based on the information provided by the NCU. to be defective in case

Auto maintenance function to shorten downtime

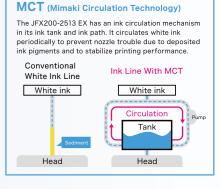



The operating status conditions of the printer and the amounts of inks usedcan be monitored remotely. PICT allows you to do other work during printing, helping you to perform operations in a planned manner.

You can also schedule maintenance and preparation for ink refilling in advance.



Expand capability in the combination with our cutting machines and expand its potential.

You can select an appropriate one from 4 sizes in line-up for space and application choice.

Wide range of size and head types are available, as well as customization. We can also customize the machines. Please contact local Mimaki sales office or dealers for more details

CF2-1218



CF2-1215



CF2-0912 900mm

1,200mm



900mm 700mm

CF2 Series

■Specifications

ltem		Specifications		
		JFX200-1213 EX		
Head		On-demand piezo head (3 staggered print heads)		
Print resolution		300 dpi, 450 dpi, 600 dpi, 900 dpi, 1,200 dpi		
Ink	Type/Color	Rigid UV curable ink LH-100		
		Flexible UV curable ink LUS-120 / LUS-150 / LUS-211 / LUS-350		
	Capacity*1	1 L bottle / 250 ml bottle		
ī	Ink circulation system*2	White ink circulation by MCT (Mimaki Circulation Technology)		
Max. Printable area (W x D)		1,270 mm × 1,300 mm		
Media	Size (W × D)	1,270 mm × 1,300 mm		
_	Height	50 mm (2.0") or lower		
	Weight	50 kg/sqm (110.2 lb/sq. ft2) or less (non concentrated load)		
Media suction		Vacuum suction + foot switch		
	Suction areas	2 partition (X direction)		
UV method		LED-UV		
Interface		USB, Ethernet		
Applicable standards		VCCI class A, CE mark, CB report, U.S. safety standard UL (UL62368-1), RoHS Directive, FCC Class A, Machinery Directive, EAC, RCM		
Power		Single-phase AC200 to 240 V, 50/60 Hz, 12 A or lower		
Power consumption		2.88 kVA		
Operating environment	Temperature	15 - 30 degC (59 - 86 degF)		
	t Humidity	35 - 65 %Rh		
	Optimal temperature	20 - 25 degC (68 - 77 degF)		
	Temperature gradient	Less than ± 10 degC / h (± 18F/h)		
	Dust	Equivalent to an office		
Assembled dimensions (W×D×H)		3,142 mm x 2,320 mm x 1,235 mm		
Weight		550 kg		

■Optional Accessories

Item No.	Item	Remarks
OPT-J0348	Optional blower Connector Kit	Necessary kit for connecting an optional vacuum unit
OPT-J0216	Vacuum unit (φ3 mm × 200 mm (φ 0.1 in. × 7.9 in.))	Three-phase, 200 V-240 V, 30 A, 3.4 kW
OPT-J0217	Vacuum unit (φ1 mm × 200 mm (φ 0.04 in. × 7.9 in.))	Single-phase, 200 V-240 V, 30 A, 1.9 kW
OPT-J0232	Vacuum unit (φ3 mm × 400 mm (φ 0.1 in. × 15.7 in.))	Three-phase, 380 V-480 V, 20 A, 3.4 kW
OPT-J0499	4C+4White ink applying kit	Necessary kit for 4C+4White ink set
OPT-J0513	Lift-Up Block	
OPT-J0569	lonizer kit	

■Supplies

	Color	Item No.	Remarks
LH-100	Cyan	LH100-C-BA	
	Magenta	LH100-M-BA	
	Yellow	LH100-C-BA	
	Black	LH100-K-BA	
	Light cyan	LH100-LC-BA	
	Light magenta	LH100-LM-BA	
	White	LH100-W-BA	
	Clear	LH100-CL-BA	<u></u>
LUS-120	Cyan	LUS12-C-BA	
	Magenta	LUS12-M-BA	
	Yellow	LUS12-Y-BA	
	Black	LUS12-K-BA	
	White	LUS12-W-BA	
	Clear	LUS12-CL-BA	Ink package:
LUS-150	Cyan	LUS15-C-BA	1 L bottle
	Magenta	LUS15-M-BA	
	Yellow	LUS15-Y-BA	
	Black	LUS15-K-BA	
	Light cyan	LUS15-LC-BA	
	Light magenta	LUS15-LM-BA	
	White	LUS15-W-BA	
LUS-350	Cyan	LUS35-C-BA	
	Magenta	LUS35-M-BA	
	Yellow	LUS35-Y-BA	
	Black	LUS35-K-BA	
	White	LUS35-W-BA	
	Clear	LUS35-CL-BA	
Primer*3 PR-200		PR200-Z-BA	
Tungsten replacement needle for ionizer		SPA-0208	4pcs.

- *1: LH-100, LUS-120 and PR-200 come in both 250 ml and 1 L bottles.
- *2: MCT works only with white ink.
- *3: The PR-200 is not compatible with LUS-211 and LUS-350.
- As the stretchability of flexible ink may vary depending on materials, please have a prior test print. * LH-100, LUS-120 and LUS-150 are GREENGUARD Gold certified ink.

About Ethernet

- *Please use Category 6 (CAT6) network cables. *Cannot be connected through the router
- *When printing from ethernet, place the printer and output PC on the same network
- *When using a switching hub, a 1000BASE-T compatible hub is necessary
- *Although up to 4 printers can be registered with RasterLink7, printing may stop depending on the network environment.

Inks and substrates:

- ·As physical properties of ink (adhesion, weather resistance etc.) are different depending on media, please be sure to have a print test in advance
- Depending on the application, primers, other surface treatment or surface protection such as lamination may be



- This product is equipped with UV irradiation equipment.
- Please pay attention to the following notes in order to use safely.

 Do not look directly into the UV light source nor place your hand, or expose your skin directly to the UV light source. Depending upon print mode, some VOC emittance from printed parts not yet cured and hardened may occur
- •In addition, please be sure to read and follow the instructions and guidelines of the manual carefully.
- ●Some of the samples in this catalog are artificial renderings. ●Specifications, design and dimensions stated in this catalog may be subject to change without notice (for technical improvements, etc). The corporate names and merchandise names written on this catalog are the trademark or registered trademark of the respective corporations. Inkjet printers print using extremely fine dots, so colors may very slightly vary after replacement of the printing heads. Also note that if using multiple printer units, colors could vary slightly from one unit to other unit due to slight individual differences



CONTACTEZ-NOUS

magentiss@magentiss.fr www.magentiss.fr shop-magentiss.fr +33(0)4 28 29 92 27